

# ACCUSCRIBE™


## How to get a reading on a single stand drilling rig

### Overview

This document should be used as a reference to obtain an offset with the AccuScribe system on a single stand drilling rig, such that the block height isn't tall enough to see the mud motor high side and the MWD high side at the same time. Therefore, the motor high side must be transferred to the top sub on the mud motor, to effectively shorten the distance between the mud motor and MWD

### Transferring the Highside

Have the mud motor shop send the motor out with a painted high side on the top of the mud motor. As seen below

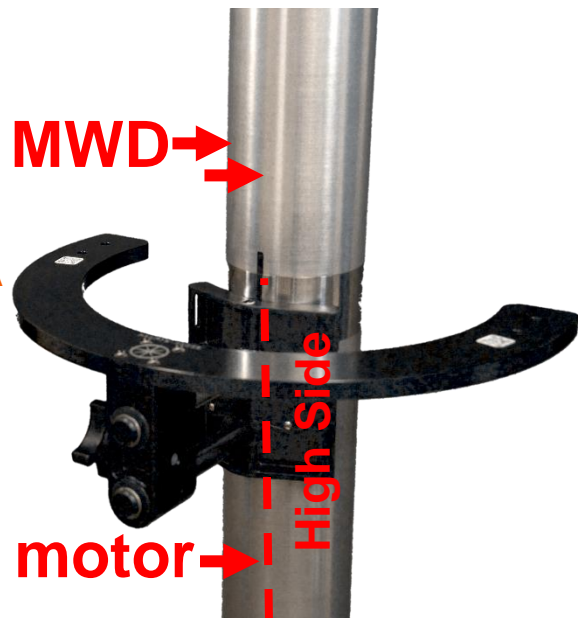

### Trip in hole with BHA

After picking up the mud motor, trip in hole and connect the MWD non-magnetic drill collar

### Take offset from shortened distance

Perform AccuScribe system from MWD high side and painted mud motor line



To find out more about ACCUSCRIBE or for support contact +1 281 921 6500 or [info@accuscribe.us](mailto:info@accuscribe.us)

[accuscribe.us](http://accuscribe.us)